

MOUNTING PLATE & OPERATOR (MP&O) GUIDE

VON DUPRIN Exit Devices

Exit Device		Exterior Operator		MP&O Level	
Type	Model #	Type	#		
3	Rim	33E0	none		
		33NL-OP	Cylinder	334	
		33NL-TP	Pushbuton	333NL-TP	
		33L	Lever Trim	370L	V8F8 V
		33TL	Thumbturn	370T	V8F8 V
3	SVR	3327E0	none		
		3327NL-OP	Cylinder	n/a	
		3327NL-TP	Pushbuton	333NL-TP	
		3327L	Lever Trim	370L	V8F8 V
3	CVR	3347E0	none		
		3347NL-OP	Cylinder	n/a	
		3347NL-TP	Pushbuton	333NL-TP	
		3347L	Lever Trim	372L	
		3347TL	Thumbturn	376T	V13D6 IV
3	Rim	33AE0	none	n/a	V10A II
		33ANL	Cylinder	386NL	V10A II
		33AL	Lever Trim	360L	V10A II
		33ATL	Thumbturn	360T	
3	SVR	33A27E0	none	n/a	V10A II
		33A27-NL	Cylinder	386NL	V10A II
		33A27-NL	Cylinder	388	
		33A27L	Lever Trim	360L	V10A II
		33A27TL	Thumbturn	374T	
3	CVR	33A47E0	none	n/a	V10A II
		33A47-NL	Cylinder	386NL	V10A II
		33A47-NL	Cylinder	388	
		33A47L	Lever Trim	360L	V10A II
		33A47TL	Thumbturn	376T	V13D6 IV
5	Rim	55E0	none	n/a	
		55NL	Cylinder	550NL	
5	Mortise	5575E0	none	n/a	
		5575NL	Cylinder	5575NL	
		5575L	Lever	375-L	
5	CVR	5547E0	none	n/a	
			5547 Cylinder	5547NL	
		5547L-F	Lever	371-L	V9D6 IV
		5547TL	Thumbturn	376T	V13D6 IV

V1A or V4A can be used to replace 990TP trim. Use NL Drive Screw into crosshair cam at back of device and tailpiece guide.

VON DUPRIN Exit Devices

Exit Device		Exterior Operator		MP&O Level	
Type	Model #	Type	#		
8	Rim	88E0	none	n/a	
		88NL	Cylinder	880NL	V2A II
		88TP	Thumbpiece	880TP	V11D6 IV
					V15A III
		88L	Lever	373L	V12B4 II
8	SVR	88K	Knob	880K	V7B4 III
8	Mortise	8875E0	none	n/a	
		8875NL	Cylinder		
		8875TP	Thumbpiece	880TP	V11D6 IV
		8875L	Lever	373L	V12B4 II
		8875K	Knob		
8	SVR	8827E0	none		
		8827TP	Thumbpiece	880TP	V11D6 IV
		8827L	Lever	373L	V12B4 II
		8827K	Knob		
				377DT 376TX Thumbturn	880DT
8	CVR	8847E0	none	n/a	V13D6 IV
		8847L	Lever	371L	V9D6 IV
		8847TL	Thumbturn		V13D6 IV
9	Rim	99E0	none	n/a	V1A II
		99NL	Cylinder/plate	990NL	V4A II
		99NL	Cylinder only	110NL	V1A II
		99TP	Thumbpiece	990TP	V1A II
		99L	Lever	992L	
		99K	Knob	991K	V1A II
9	Mortise	9975E0	none	n/a	
		9975NL	Cylinder/plate	N/A	
		9975TP	Thumbpiece	990TP	
		9975L	Lever	992L	V14B8 III
		9975K	Knob	991K	V14B8 III
9	SVR	9927E0	none	n/a	V1A II
		9927NL	Cylinder/plate	990NL	V4A II
		9927NL	Cylinder only	110NL	V1A II
		9927TP	Thumbpiece	990TP	V4A II
		9927L	Lever	992L	V1A II
		9927K	Knob	991K	V1A II
		9927TL	Thumbturn	374T	
9	CVR	9947E0	none	n/a	V1A II
		9947NL	Cylinder/plate	990NL	V4A II
		9947NL	Cylinder only	110NL	V1A II
		9947L	Lever	992L	V1A II
		9947WDC-TL	Knob	374T	