

MARKING

Place the template against the door and the frame soffit and mark all the holes on the inside of the door.

DRILLING

1) Drill the following holes:

Hole Size Note

A 1/4" Through the door

(4 holes)

A Enlarge exterior to 3/8"

B 5/8" Through the door

C 1" Through the door for RHR


D 5/8" Inside Only (LA/LD, LS Lever Trim only)

E 7/16" Inside Only (4 holes)

**TMP4945-LEV TRIM MARKING TEMPLATE - LHR
FOR LEFT HAND REVERSE BEVEL DOORS**

A Note About Templates:

Any reproduction of this template, via fax, photocopy or digital transmission, renders it **Not To Scale.**

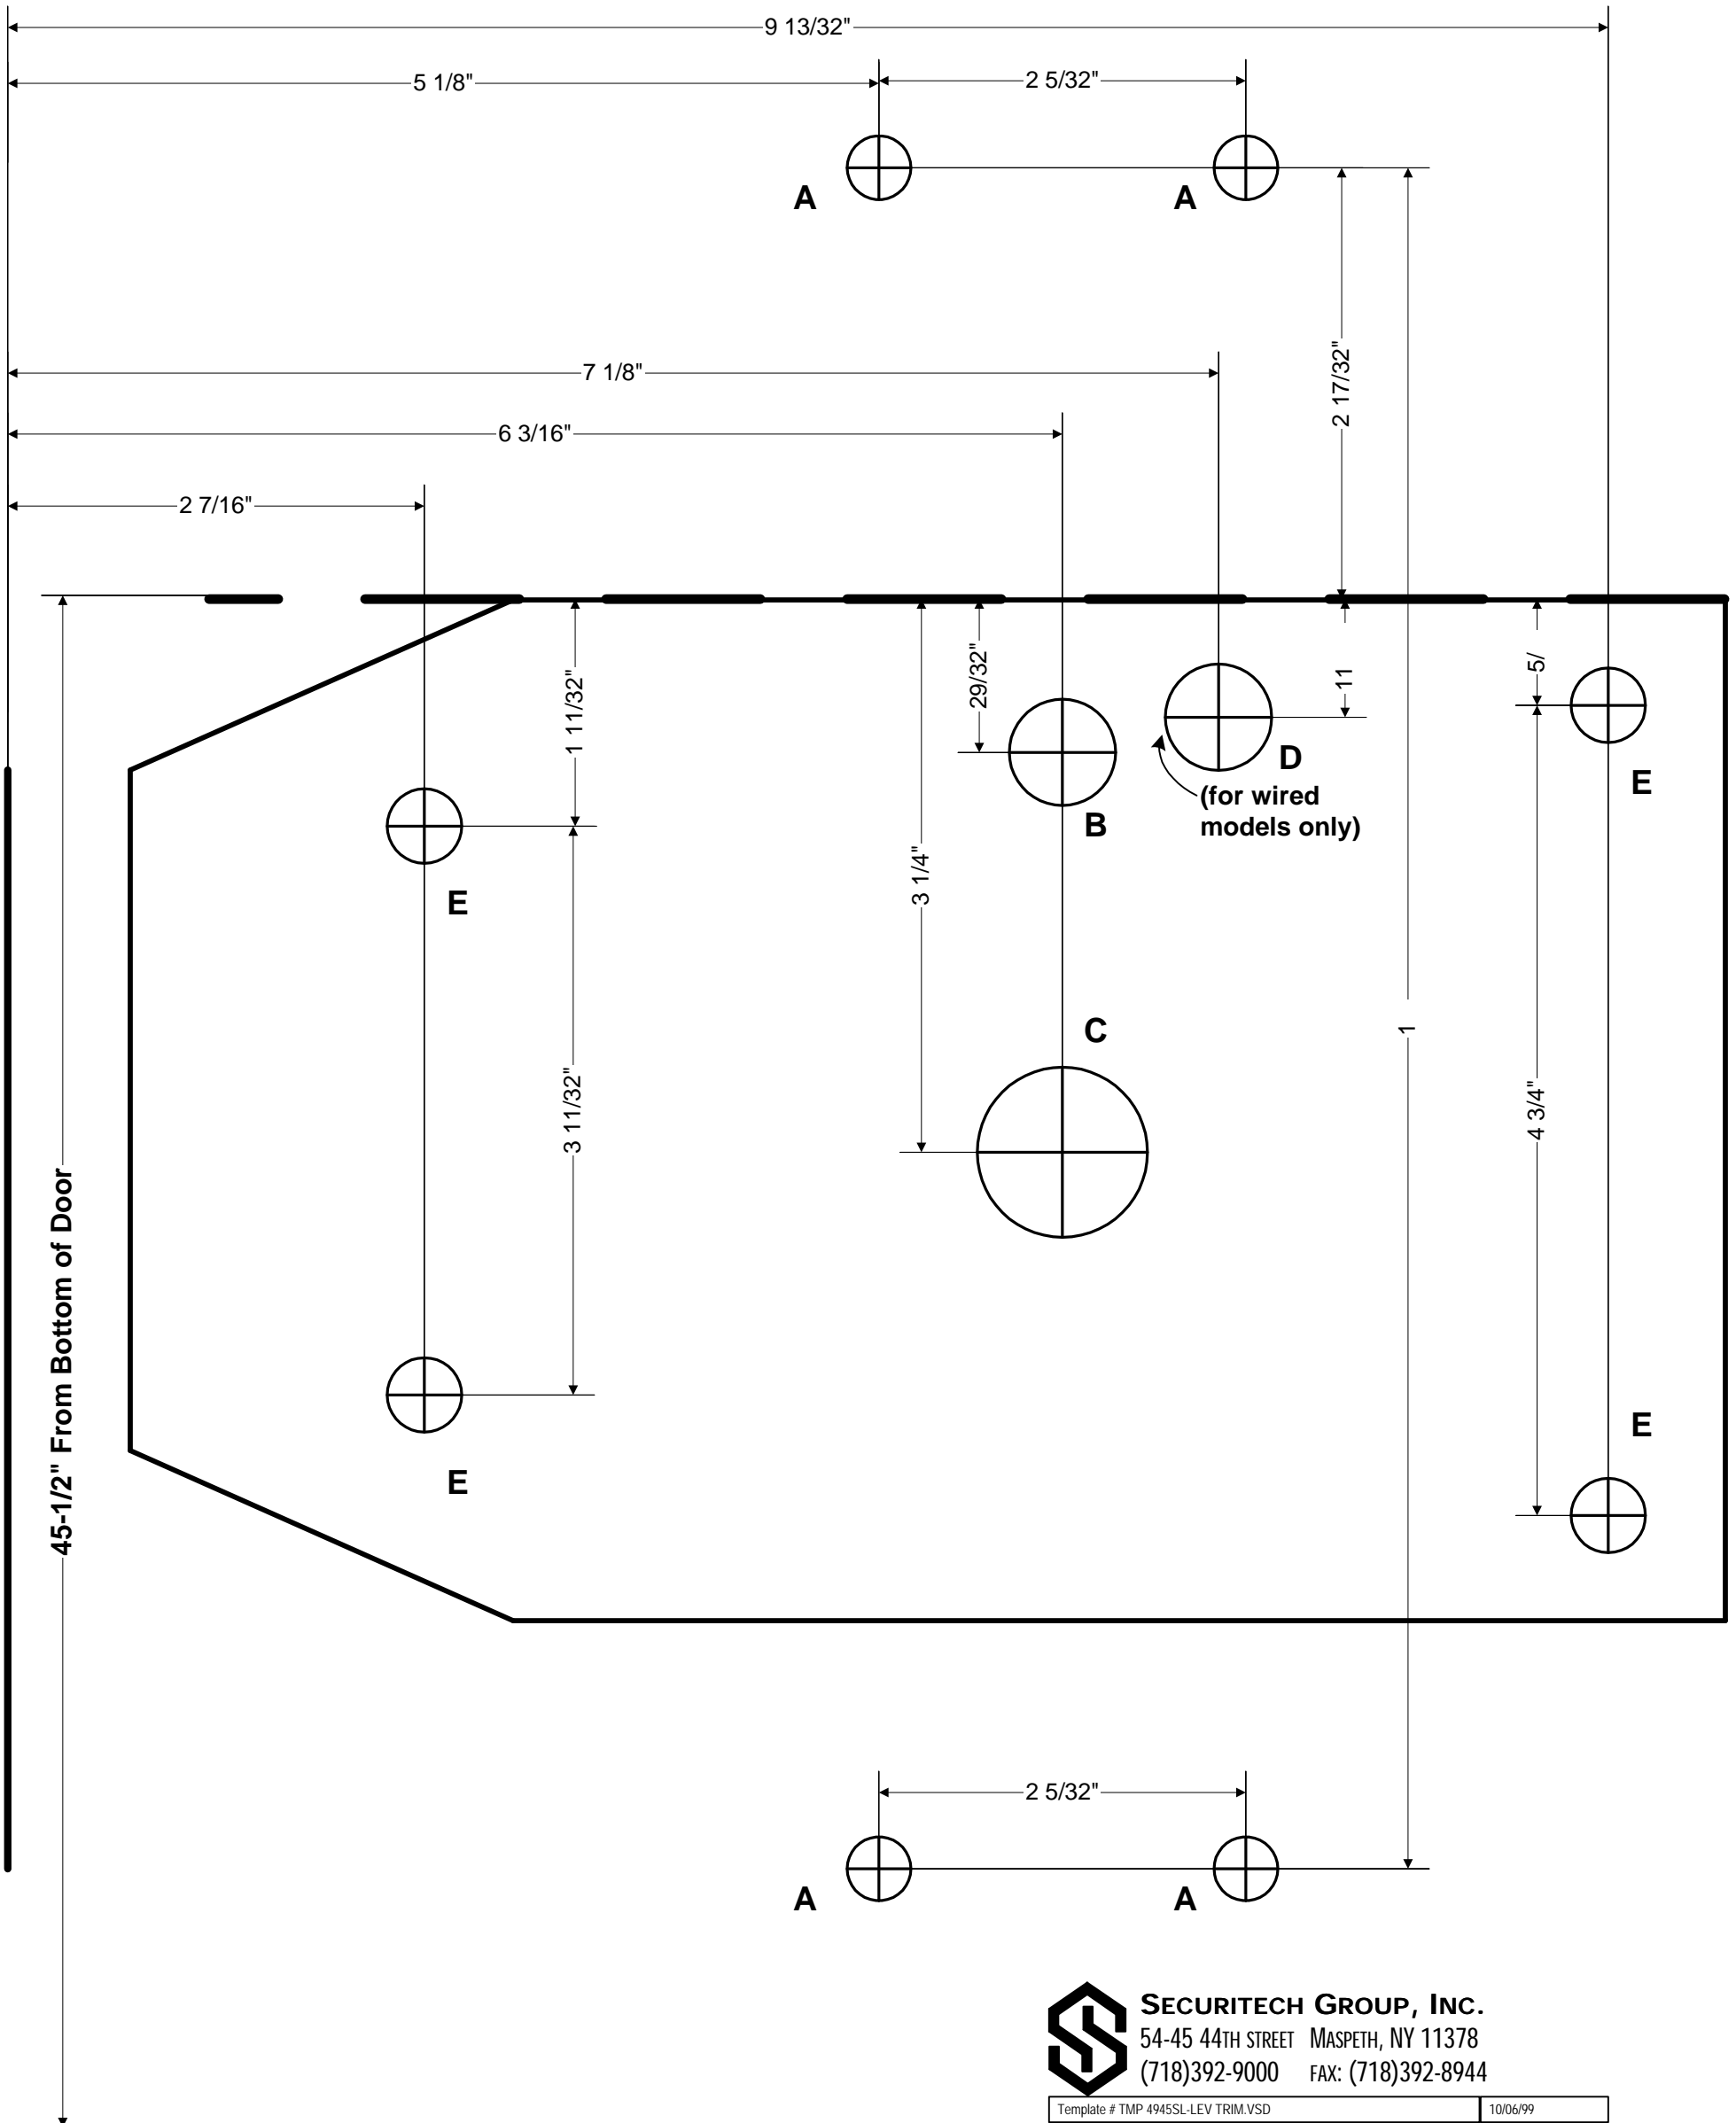

SECURITECH GROUP, INC.
54-45 44TH STREET MASPETH, NY 11378
(718)392-9000 FAX: (718)392-8944