



STRIKE PREPARATION (HEADER & FLOOR)
In steel frames, Securitech recommends drilling a hole directly through the frame in the field, rather than preparing for a strike plate. The same is true for drilling into the saddle for the dust-proof strike. Detailed information is provided in the installation instructions.

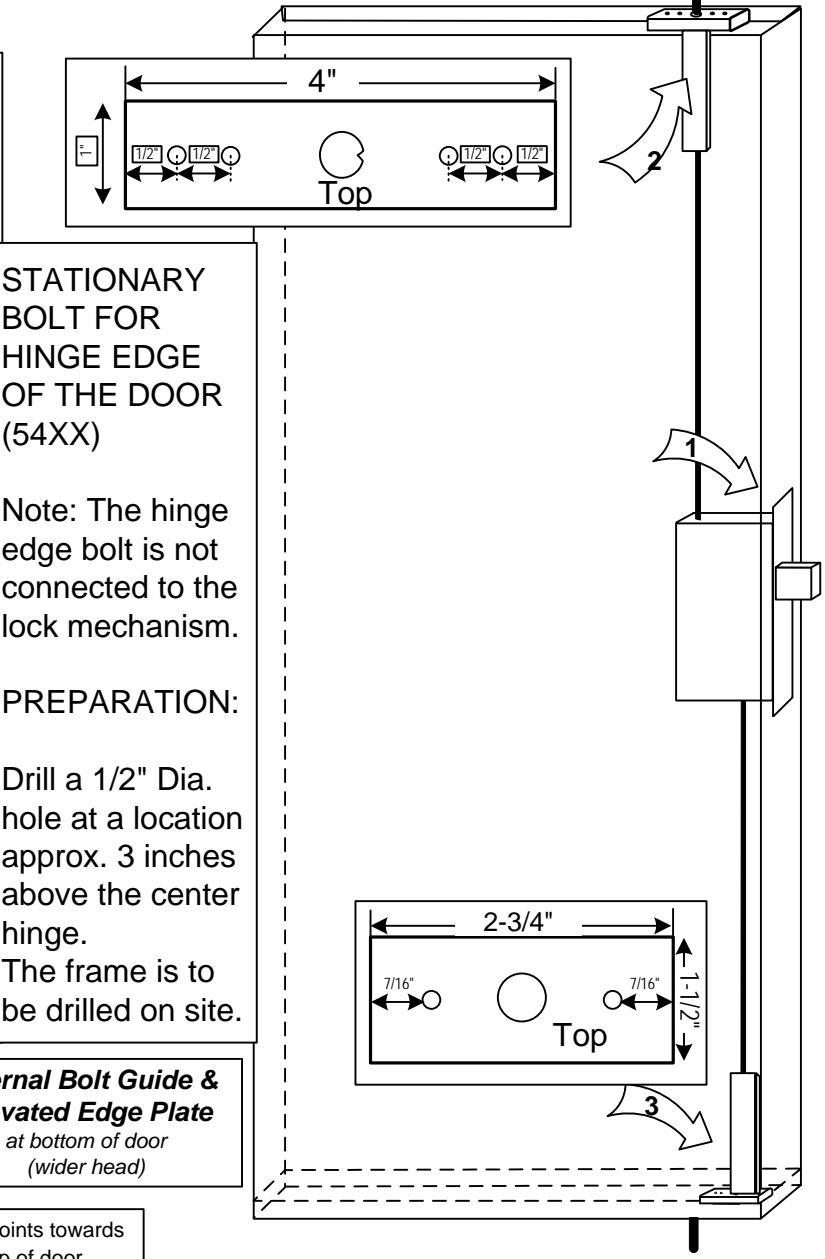

Template No. TMP5XXXDB-IHD V4.VSD	For Use With Model Numbers: 52VXX, 53XX, 54XX
 SECURITECH GROUP, INC.	54-45 44TH ST. MASPETH, NY 11378 (718)392-9000 FAX: (718)392-8944
LAST EDIT: 12/23/03 BY: MTAG	