



A Note About Templates:

Any reproduction of this template, via fax, photocopy or digital transmission, renders it **Not To Scale.**




FLAT TO 1/8" IN 2" FRONT BEVEL
ADJUST TEMPLATE FOR DOOR BEVEL

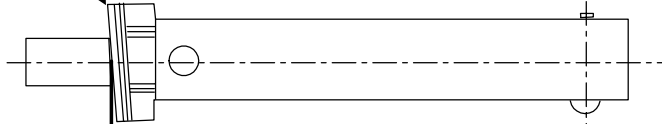

4" Backset

Mark Horizontal Reference Line 3/8" from C.L. of Mounting Screw Hole
(top of lock mounting tab - may be same as top of mortise opening)

CL OF HOLE OF MOUNTING TAB




3/8"

Drill rectangular access holes for SBO and/or TDV features as per each model

3 3/4"

PLACE ON INTERIOR OF DOOR.
THIS SIDE OF TEMPLATE FACES YOU FOR
LH/LHR BEVEL
DOOR

VERTICAL REFERENCE LINE, ADJUST FOR BEVEL OF DOOR

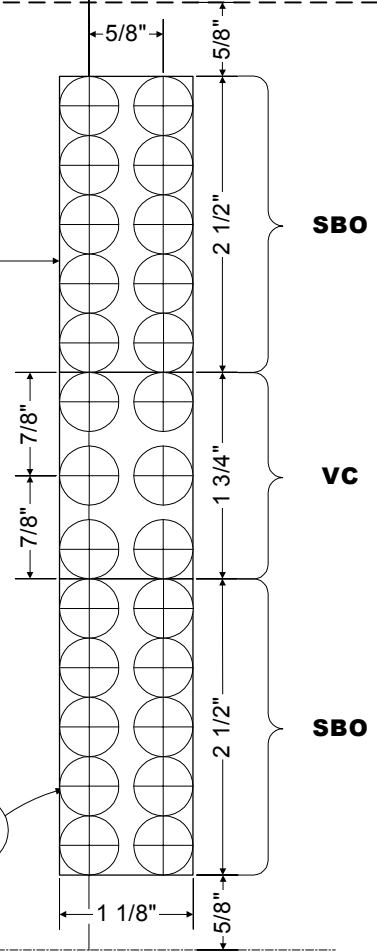


SBO

VC

SBO

1/2" Holes
Use chisel to make rectangle.

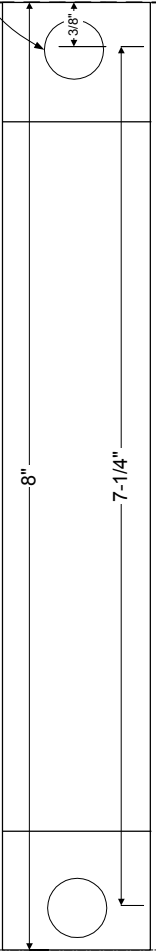

TEMPLATE TMP8XSBO ROD HOLDER ASSEMBLY

TO BE USED FOR 8000 SERIES AUTOBOLT
WITH SURFACE BOLT OPTION (SBO)
All measurements are from the CL of the door edge
Adjust all measurements for the door bevel
All holes are on the interior of door ONLY


Strike Prep - Standard 4-7/8"
Top Of Mortise Opening To Top Of 4-7/8" Strike In Frame: Standard 1-3/16"

SECURITECH GROUP, INC.
54-45 44TH STREET MASPETH, NY 11378
(718)392-9000 FAX: (718)392-8944

A Note About Templates:

Any reproduction of this template, via fax, photocopy or digital transmission, renders it **Not To Scale.**

**FLAT TO 1/8" IN 2" FRONT BEVEL
ADJUST TEMPLATE FOR DOOR BEVEL**

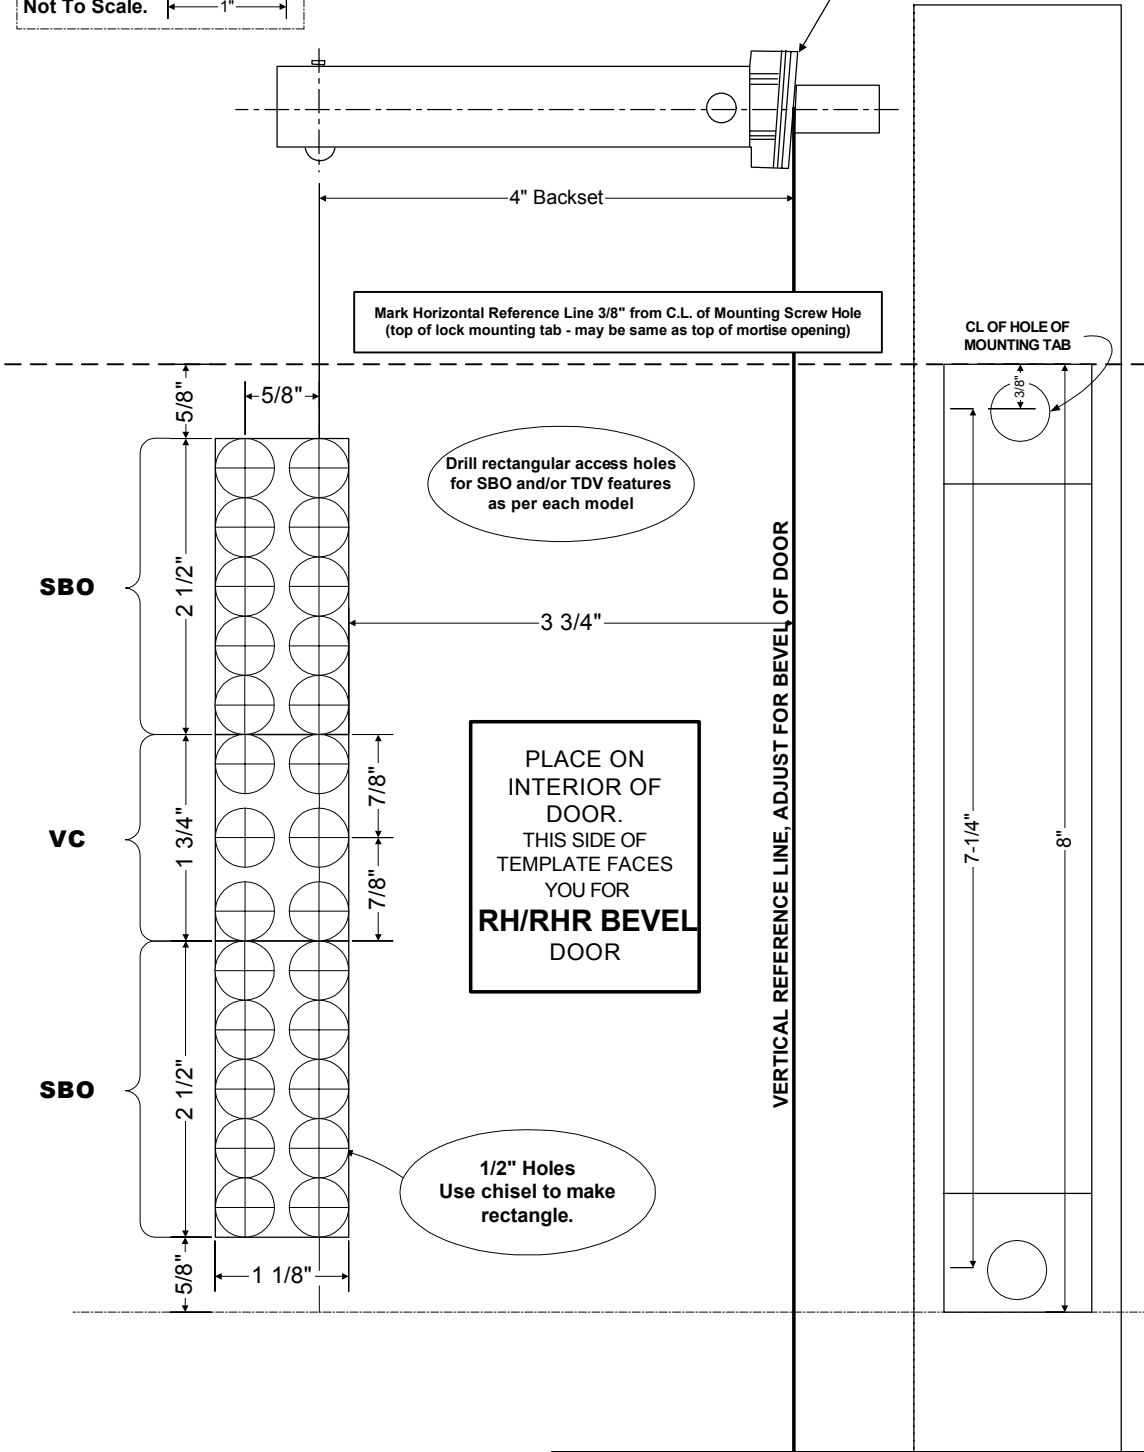

Mark Horizontal Reference Line 3/8" from C.L. of Mounting Screw Hole
(top of lock mounting tab - may be same as top of mortise opening)

CL OF HOLE OF MOUNTING TAB

Drill rectangular access holes for SBO and/or TDV features as per each model

PLACE ON INTERIOR OF DOOR.
THIS SIDE OF TEMPLATE FACES YOU FOR
RH/RHR BEVEL DOOR

1/2" Holes
Use chisel to make rectangle.

VERTICAL REFERENCE LINE, ADJUST FOR BEVEL OF DOOR

TEMPLATE TMP8XSBO ROD HOLDER ASSEMBLY
 TO BE USED FOR 8000 SERIES AUTOBOLT WITH SURFACE BOLT OPTION (SBO)
 All measurements are from the CL of the door edge
 Adjust all measurements for the door bevel
 All holes are on the interior of door ONLY
Strike Prep - Standard 4-7/8"
 Top Of Mortise Opening To Top Of 4-7/8" Strike In Frame: Standard 1-3/16"